

briggs and stratton governor spring installation

Briggs and Stratton Governor Spring Installation: A Comprehensive Guide

If you're a homeowner or a small engine enthusiast, understanding how to properly install a Briggs and Stratton governor spring is essential for maintaining optimal engine performance. The governor spring plays a vital role in controlling the engine's speed, ensuring it runs smoothly under varying loads. Whether you're replacing a worn-out spring or upgrading for better performance, this guide will walk you through the entire process of Briggs and Stratton governor spring installation with clear, step-by-step instructions.

Understanding the Role of the Briggs and Stratton Governor Spring

Before diving into the installation process, it's important to grasp what the governor spring does and why it's critical for your engine's operation.

What Is a Governor Spring?

The governor spring is a component of the engine's governor system, which regulates engine speed by adjusting throttle movement. It works in conjunction with the governor arm and linkage to maintain a consistent RPM, regardless of load variations.

Why Is the Governor Spring Important?

- Maintains stable engine speed
- Prevents engine over-revving
- Ensures smooth power delivery
- Protects engine components from excessive stress

A faulty or worn governor spring can cause inconsistent engine performance, surging, or even damage to internal parts. Replacing or installing a new spring correctly ensures your engine runs reliably and efficiently.

Tools and Materials Needed for Installation

Proper preparation makes the installation process smoother. Here's what you'll need:

Tools

- Screwdriver (flat-head or Phillips, depending on your model)
- Socket wrench set
- Pliers (needle-nose recommended)
- Work gloves for safety
- Clean cloth or rag

Materials

- Replacement Briggs and Stratton governor spring (specific to your engine model)
- Engine oil (for after installation, if needed)
- Engine manual or parts diagram (recommended)

Step-by-Step Guide to Installing a Briggs and Stratton Governor Spring

Follow these detailed steps to replace or install the governor spring correctly.

1. Prepare Your Workspace

- Find a clean, well-lit area with enough space to work comfortably.
- Ensure the engine is cool to prevent burns.
- Disconnect the spark plug wire to prevent accidental engine starting.

2. Remove the Engine Cover or Shroud

- Use a screwdriver or socket wrench to remove screws holding the engine cover.
- Carefully lift off the cover to expose the governor linkage and related components.
- Keep all screws in a safe place for reassembly.

3. Locate the Governor Spring

- Identify the governor arm and linkage.
- The governor spring is usually attached between the governor arm and a fixed point on the engine housing.
- Consult your engine's manual or parts diagram if unsure.

4. Remove the Old Governor Spring

- Use pliers to gently detach the spring from its mounting points.
- Take note of the spring's orientation and attachment points for correct installation of the new one.
- Be cautious to avoid snapping or overstretching the spring.

5. Install the New Governor Spring

- Attach one end of the new spring to the governor arm.
- Secure the other end to the fixed mounting point on the engine.
- Ensure the spring is seated properly and not overstretched.
- Double-check the tension; it should have slight tension but not be overly tight.

6. Reassemble the Engine Cover

- Carefully replace the cover or shroud.
- Reinsert screws and tighten securely but avoid overtightening to prevent damage.

7. Test the Installation

- Reconnect the spark plug wire.
- Start the engine and observe its behavior.
- Gradually increase engine speed and check for smooth operation.
- Listen for any irregular surging or abnormal noises.

8. Fine-Tune if Necessary

- Some engines allow for tension adjustment of the governor spring.
- Refer to your manual for specific instructions on fine-tuning.
- Make small adjustments and test engine response.

Tips for a Successful Governor Spring Installation

- Always use the correct spring designed for your specific Briggs and Stratton engine model.
- Take photos during disassembly to aid reassembly.
- Work slowly and carefully to avoid damaging components.
- Wear gloves for safety and to keep parts clean.
- After installation, perform a test run to ensure proper engine performance.
- If unsure about any step, consult your engine's service manual or seek professional assistance.

Common Issues and Troubleshooting

Even with careful installation, you might encounter some problems. Here are common issues and solutions:

Engine Surging or Running Too Fast

- The governor spring might be too loose or improperly installed.
- Adjust the spring tension as per the manual.
- Double-check the attachment points.

Engine Won't Idle Properly

- Ensure the spring is correctly positioned and seated.
- Clean or inspect other governor components for wear or damage.

Spring Breaks or Slips Off

- Use the correct spring length and tension.
- Avoid overstretching or forcing parts during installation.
- Replace with high-quality springs if repeated issues occur.

Maintenance Tips for Your Briggs and Stratton Governor System

To ensure longevity and optimal performance:

- Regularly inspect governor components for wear or damage.
- Clean the governor linkage and spring area periodically.
- Change engine oil as recommended to prevent sludge buildup.
- Replace governor springs and other parts at the first sign of fatigue.
- Follow the manufacturer's maintenance schedule and guidelines.

Conclusion

Properly installing a Briggs and Stratton governor spring is a straightforward task that can significantly improve your engine's stability and performance. By understanding the role of the spring, gathering the right tools, and following a systematic approach, you can confidently undertake this maintenance task. Remember to refer to your specific engine manual for model-specific instructions and always prioritize safety. Regular maintenance and timely replacements will ensure your small engine continues to operate smoothly for years to come.

If you need further assistance or professional help, don't hesitate to contact a certified small engine technician. Proper care and maintenance will keep your Briggs and Stratton engine running at peak performance!

Frequently Asked Questions

What tools are needed to install a Briggs and Stratton governor spring?

You'll typically need a screwdriver, pliers, and possibly a socket wrench. Always check your specific engine model's manual for exact tools required.

How do I identify the correct governor spring for my Briggs and Stratton engine?

Refer to your engine's model number and consult the manufacturer's parts diagram or manual to ensure you select the correct spring type and length for your engine.

What are the steps to install a new governor spring on a Briggs and Stratton engine?

First, disconnect the spark plug for safety. Remove the engine cover, locate the governor assembly, then carefully detach the old spring and replace it with the new one, ensuring proper attachment and tension as per the manual instructions.

Can I install a governor spring without removing the carburetor?

In some models, you can access the governor spring without removing the carburetor, but in many cases, removal is necessary for proper installation. Always follow your engine's service manual for guidance.

How do I ensure the governor spring is installed correctly and tensioned properly?

After installation, start the engine and adjust the governor arm for smooth operation. The engine should run at a consistent speed without surging, indicating correct spring tension.

What are common mistakes to avoid when installing a Briggs and Stratton governor spring?

Avoid installing the spring backward, not securing it properly, or neglecting to set the correct tension. Incorrect installation can cause engine surging or damage.

How often should I replace the governor spring on my Briggs and Stratton engine?

Replace the governor spring if you notice engine speed fluctuations, surging, or after performing extensive engine repairs. Regular inspection can help catch wear early.

Where can I find detailed instructions or videos on Briggs and Stratton governor spring installation?

You can visit the Briggs & Stratton official website, consult your engine's service manual, or search for instructional videos on platforms like YouTube for step-by-step guidance.

Additional Resources

Briggs and Stratton governor spring installation is a crucial maintenance task that can significantly improve the performance and longevity of your small engine equipment. Whether you're dealing with a lawnmower, generator, or other equipment powered by a Briggs and Stratton engine, understanding how to replace or install a governor spring properly can help restore smooth operation, prevent engine surges, and maintain optimal

speed regulation. This comprehensive guide aims to walk you through each step of the process, outline necessary tools and safety precautions, and provide insights into common issues and solutions associated with governor spring installation.

Understanding the Role of the Governor Spring

What Is a Governor Spring?

The governor spring is a vital component within the engine's governor system, responsible for controlling the throttle linkage that manages engine speed. It works in conjunction with the governor arm, linkage, and other components to automatically adjust throttle settings based on load demands, ensuring the engine runs at a consistent speed.

Why Is the Governor Spring Important?

A properly functioning governor spring ensures:

- Consistent engine speed under varying load conditions
- Prevention of engine over-revving, which can cause damage
- Smooth acceleration and deceleration
- Reduced engine surging or stalling

A damaged or worn governor spring can result in erratic engine behavior, making it crucial to replace it when necessary.

Tools and Materials Needed for Installation

Before starting, gather the following tools and materials:

- Replacement Briggs and Stratton governor spring (make sure it matches your engine model)
- Socket set or wrench set
- Screwdrivers (flat-head and Phillips)
- Pliers
- Work gloves
- Safety glasses
- Engine manual or parts diagram (recommended)
- Penetrating oil (if components are stuck)
- Rag or shop towels

Having all tools at hand will streamline the installation process and reduce the risk of mistakes.

Preparation Before Installation

Safety First

- Disconnect the spark plug wire to prevent accidental engine start.
- Work in a well-ventilated area.
- Wear safety glasses and gloves for protection.

Accessing the Governor Spring

- Remove the engine cover or shroud if necessary.
- Consult your engine's manual or parts diagram to locate the governor spring.
- Identify the spring's attachment points: typically connected between the governor arm and the carburetor linkage or throttle plate.

Step-by-Step Guide to Installing the Governor Spring

1. Remove the Old Governor Spring

- Carefully detach the old spring from its mounting points using pliers if needed.
- Note the orientation and attachment points for reference during installation.
- Use penetrating oil if the spring or components are corroded or stuck.

2. Inspect Related Components

- Check the governor arm, linkage, and throttle plate for wear or damage.
- Replace any worn or damaged parts before installing the new spring.

3. Prepare the New Spring

- Ensure the replacement governor spring matches the specifications for your engine model.
- Check the spring for any deformities or defects.

4. Install the New Governor Spring

- Attach one end of the spring to the governor arm or linkage.
- Stretch or position the spring carefully to connect to the carburetor throttle linkage or designated mounting point.
- Be cautious not to overstretch the spring, as this can affect engine performance.
- Use pliers if necessary to secure the spring onto hooks or attachment points.

5. Verify the Spring's Position and Tension

- Ensure the spring is seated properly and has the correct tension.
- The spring should provide enough tension to return the governor arm to its neutral position but not so tight as to restrict movement.

6. Reassemble and Test

- Reattach any covers or shrouds removed during disassembly.
- Reconnect the spark plug wire.
- Start the engine and observe the idle and throttle response.
- Adjust the governor linkage if necessary to achieve the desired engine speed.

Adjustments After Spring Installation

Fine-Tuning Engine Speed

- The governor spring's tension directly impacts engine speed regulation.
- If the engine runs too fast or too slow, adjust the linkage or spring tension accordingly.
- Consult your engine manual for specific adjustment procedures.

Testing Under Load

- Operate the equipment under typical load conditions.
- Watch for surging, stalling, or inconsistent speed.
- Make further adjustments if needed to achieve stable operation.

Common Challenges and Troubleshooting

Spring Not Staying Attached

- Ensure the spring is the correct size and tension.
- Use appropriate tools to securely hook the spring onto attachment points.
- Replace any damaged hooks or connectors.

Engine Surging or Stalling

- May indicate the spring tension is too loose or tight.
- Reassess and adjust the tension accordingly.
- Check for other issues like clogged carburetors or worn governor components.

Corrosion or Rust

- Rusted springs can weaken or break.
- Regular maintenance and lubrication can prevent rust.
- Replace corroded springs promptly.

Features and Benefits of Proper Governor Spring Installation

- Restores engine to manufacturer-recommended speed regulation
- Eliminates surging, stalling, or inconsistent performance
- Extends engine lifespan by preventing over-revving
- Improves fuel efficiency and power output
- Ensures safe operation of equipment

Pros and Cons of Installing a New Governor Spring

Pros:

- Cost-effective way to fix engine speed issues
- Improves engine responsiveness
- Prevents potential engine damage from over-revving
- Easy to replace with basic mechanical skills

Cons:

- Incorrect installation can cause further issues
- Spring may wear out over time, requiring future replacement
- Requires careful adjustment for optimal performance

Final Tips and Recommendations

- Always use the correct replacement spring specified for your engine model.
- Refer to the engine's manual or manufacturer's instructions for precise procedures.
- Take your time during installation to ensure proper attachment and tension.
- Regularly inspect governor components as part of routine maintenance.
- If unsure about the process, seek assistance from a qualified technician.

By mastering the briggs and stratton governor spring installation, you can maintain your engine's performance, prevent costly repairs, and enjoy smoother operation of your outdoor power equipment. Proper installation and adjustment are key to harnessing the full potential of your engine, ensuring safety, efficiency, and longevity for years to come.

[Briggs And Stratton Governor Spring Installation](#)

briggs and stratton governor spring installation: *How to Repair Briggs & Stratton Engines* Paul Dempsey, 1994 This practical, step-by-step guide advises on how to repair Briggs and Stratton engines, which power a wide variety of lawn mowers, garden tools, go-karts, air compressors and other light utility units. This edition has been updated to include current information on both new and old engines, as well as a new section on engine components and types.

briggs and stratton governor spring installation: How to Repair Briggs and Stratton Engines, 4th Ed. Paul Dempsey, 2007-06-19 Learn the Latest Money-Saving Techniques for Troubleshooting and Repairing Any Briggs & Stratton Engine, New or Old! /p> Turn to the Fourth Edition of How to Repair Briggs & Stratton Engines for expert guidance on completing any Briggs & Stratton maintenance and repair job quickly and easily. This money-saving resource now includes the latest information on overhead valves (OHV), carburetion advances, new muffler designs, and cutting-edge alternators. Filled with proven techniques for fixing both brand-new and older model Briggs & Stratton engines, the Fourth Edition of this hands-on reference covers everything from ignition, fuel, and charging systems...to starters and engine mechanics. You will find step-by-step instructions for troubleshooting and repairing magnetos...carburetors...

governors...alternators...main bearings...flywheels...coils...fuel pumps ...air filters...rewind and electric starters...and connecting rods. Using more than 190 detailed illustrations, the Fourth Edition of How to Repair Briggs & Stratton Engines features: All the expertise needed to perform maintenance and repair jobs on any Briggs & Stratton engine Comprehensive guidance on state-of-the-art small-engine technology New to this edition: updated material on overhead valve design (OHV); new coverage of Flo-Jet suction lift carburetion; and new information on alternators, torque limits, and bolt tightening sequences Inside this Updated Briggs & Stratton Repair Kit • Introduction • The Product Range • Troubleshooting • Ignition Systems • The Fuel System • Starters • Charging Systems • Engine Mechanics • The Overhead Valve Revolution

briggs and stratton governor spring installation: Technical Manual United States. War Department, 1942

briggs and stratton governor spring installation: ,

briggs and stratton governor spring installation: Manuals Combined: 150+ U.S. Army Navy Air Force Marine Corps Generator Engine MEP APU Operator, Repair And Parts Manuals , Over 36,000 total pages Just a SAMPLE of the CONTENTS by File Number and TM

Number:: 013511 TM 5-6115-323-24P 4 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 1.5 K SINGLE PHASE, AC, 120/240 V, 28 VDC (LESS ENGINE) DOD MODELS MEP-015A, 60 HZ (NSN 6115-00-889-1446) AND (DOD MODEL MEP-025A) 28 VDC (6115-00-017-8236) {TO 35C2-3-385-4; SL 4-07609A/07610A} 013519 TM 5-6115-329-25P 1 GENERATOR SET, GASOLINE ENGINE DR (LESS ENGINE) 0.5 KW, AC, 120/240 V, 60 HZ, 1 PHASE (DOD MODEL (FSN 6115-923-4469); 400 HZ (MODEL MEP-019A) (6115-940-7862) AN DC (MODEL MEP-024A) (6115-940-7867) {TO 35C2-3-440-14} 013537 TM 5-6115-457-12 7 GENERATOR SET, ENGINE DRIVEN, TACTICAL, SKID MTD; 100 KW, 3 PHASE, 4 WIRE, 120 240/416 V (DOD MODELS MEP-007A), UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9101), (MODEL MEP-106A) PRECISE CLASS, 50/60 H (6115-00-133-9102), (MODEL MEP-116A) PRECISE CLASS, 400 KW (6115-00-133-9103) INCLUDING OPTIONAL KITS (MODEL MEP-007 AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463-9082), (MEP-007AWE WINTERIZATION KIT, ELECTRIC (6115-00-463-9084), (MODEL MEP-007A DUMMY LOAD KIT (6115-00-463-9086) AND (MODEL MEP-007AWM) WHEEL 013538 TM 5-6115-457-34 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID 100 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MODELS MEP0 UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9101); (MODEL MEP106A) CLASS, 50/60 HZ (6115-00-133-9102) AND (MODEL MEP116A), PRECISE 400 HZ (6115-00-133-9103); INCLUDING OPTIONAL KITS (DOD MODELS MEP007AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463-9082); MEP007AWE) WINTERIZATION KIT, ELECTRIC (6115-00-463-9084); (MOD MEP007ALM) DUMMY LOAD KIT (6115-00-463-9086) AND (MODEL MEP007A MOUNTING KIT (6 013540 TM 5-6115-458-24P 9 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD., 2 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS, DOD MODELS MEP009A UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9104) AND MODEL MEP108A PRECISE CLASS, 50/60 HZ (6115-00-935-8729) INCLUDING OPTIONAL K DOD MODELS MEP009AWF, WINTERIZATION KIT, FUEL BURNING (6115-00-403-3761), MODEL MEP009AWE, WINTERIZATION KIT, ELECTRIC (6115-00-489-7285) 013545 TM 5-6115-465-12 19 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 30 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 V (DOD MODEL MEP-005A), UTILITY CLASS, 50/6 (NSN 6115-00-118-1240), (MODEL MEP-104A), PRECISE CLASS, 50/60 (6115-00-118-1247), (MODEL MEP-114A), PRECISE CLASS, 400 HZ (6115-00-118-1248) INCLUDING AUXILIARY EQUIPMENT (DOD MODEL MEP WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083), (MODEL MEP- WINTERIZATION KIT, ELECTRIC (6115-00-463-9085), (MODEL MEP-005A LOAD BANK KIT (6115-00-463-9088) AND (MODEL MEP-005AWM), WH 013547 TM 5-6115-465-34 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTIC SKID MTD, 30 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MO MEP-005A), UTILITY, 50/60 HZ (NSN 6115-00-118-1240), (MODEL MEP-104A), PRECISE, 50/60 HZ (6115-00-118-1247), (MODEL MEP-114 PRECISE, 50/60 HZ (6115-00-118-1248) INCLUDING OPTIONAL KITS (MODEL MEP-005AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463 (MODEL MEP-005AWE) WINTERIZATION KIT, ELECTRIC (6115-00-463-908 (MODEL MEP-005ALM) LOAD BANK KIT (6115-00-463-9088) (MODEL MEP- WHEEL MOUNTING KIT (6115-00 013548 TM 5-6115-545-12 18 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 60 KW, 3 PHASE, 4 WIR 120/208 AND 240/416 VOLTS, DOD MODEL MEP-006A, UTILITY CLASS, 5 (NSN 6115-00-118-1243) DOD MODEL MEP-105A, PRECISE CLASS, 50/60 (6115-00-118-1252) DOD MODEL MEP-115A, PRECISE CLASS, 400 HZ (6115-00-118-1253) INCLUDING OPTIONAL KITS, DOD MODEL MEP006AWF WINTERIZATION KIT, FUEL BURNING (6115-00-407-8314) DOD MODEL MEP006AWE, WINTERIZATION KIT, ELECTRIC (6115-00-455-7693) DOD M MEP006ALM, LOAD BANK KIT (6115-00-407-8322) DOD MODEL MEP006 013550 TM 5-6115-545-34 12 INTERMEDIATE (FIELD) (DIRECT AND GENERAL SUPPORT) AND DEPOT MAINTENANCE MANUAL FOR GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD., 60 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODELS MEP-006A, UTILITY CLASS, 50/60 HZ (FSN 6115-118-1243 MEP-105A, PRECISE CLASS, 50/60 HZ (6115-118-1252) AND MEP-115A, PRECISE CLASS, 400 HZ (6115-118-1253) {TO 35C2-3-444-2; NAVFAC P-8-626-34; TM 00038G-35} 015378 TM

5-6115-323-14 10 GENERATOR GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 1.5 KW, SI PHASE, AC, 120/240 V, 28 V, DC (LESS ENGINE) (DOD MODELS MEP-01 60 HZ (NSN 6115-00-889-1446) AND (MODEL MEP-025A) 28 V DC (6115-00-017-8236) {TO 35C2-3-385-1} 015380 TM 5-6115-332-24P 3 GENERATOR GASOLINE ENGINE: AIR COOLED, 5 KW, AC, 120/240 V, SINGLE PHASE; 120/208 V, 3 PHASE, SKID MOUNTED, TUBULAR FRAME (LESS ENGINE) M DESIGN: 60 HZ (DOD MODEL MEP-017A) (NSN 6115-00-017-8240); 400 (DOD MODEL MEP-022A) (6115-00-017-8241) {TO 35C2-3-424-24} 020611 LO 5-6115-457-12 GENERATOR SET, DIESEL ENGINE DRIVEN; SKID MTD, 100 KW, 3 PHASE, 120/208 AND 240/416 V (DOD MODELS MEP-007A), UTILITY CLASS, 50/ (NSN 6115-00-133-9101); (MODEL MEP-106A) PRECISE CLASS, 50/60 H (6115-00-133-9102) AND (MODEL MEP-116A), PRECISE CLASS, 400 HZ (6115-00-133-9103) 020612 LO 5-6115-458-12 GENERATOR SET, DIESEL ENGINE DRIVEN, SKID MTD, 200 KW, 3 PHASE, 4 WIRE, 120/208/416 VOLTS, DOD MODELS MEP-009A, UTILITY CLASS, 50/60 HERTZ (NSN 6115-00-133-9104), MEP-108A, PRECISE CLASS, 50 HERTZ (6115-00-935-8729) {LO 07536A-12} 020614 LO 5-6115-465-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MOUNTED, 30 3 PHASE, 4 WIRE, 120/206 AND 240/416 V (DOD MODEL MEP-055A), UT CLASS, 50/60 HZ (NSN 6115-00-118-1240); (MODEL MEP 104A), PRECI CLASS, 50/60 HZ (6115-00-118-1247) AND (MODEL 114A) PRECISE CLA 400 HZ (6115-00-118-1248) 025150 TM 5-6115-271-14 12 GENERATOR SET, GASOLINE ENGINE DRIVEN, S MTD, TUBULAR FRAME, 3 KW, 3 PHASE, AC, 120/208 AND 120/240 V, 2 DC (LESS ENGINE) DOD MODEL MEP-016A, 60 HZ (NSN 6115-00-017-823 MODEL MEP-016C 60 HZ (6115-00-143-3311) MODEL MEP-021A 400 HZ (6115-00-017-8238) MODEL MEP-021C 400 HZ (6115-01-175-7321) MODEL MEP-026A DC HZ (6115-00-017-8239) MODEL MEP-026C 28 V DC (6115-01-175-7320) {TO 35C2-3-386-1; TM 05926A-14; NAVFAC P-8-6 025151 TM 5-6115-271-24P 3 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULA FRAME, 3 KW, 3 PHASE, AC; 120/208 AND 120/240 VOLTS, 28 VDC (LE ENGINE) (DOD MODEL MEP-016A) 60 HERTZ (NSN 6115-00-017-8237) (MEP-021A) 400 HERTZ (6115-00-017-8238) (MEP-026A) 28 VDC HERTZ (6115-00-017-8239) (MEP-016C) 60 HERTZ (6115-01-143-3311) (MEP- 400 HERTZ (6115-01-175-7321) (MEP-026C) 28 VDC HERTZ (6115-01-175-7320) {TO 35C2-3-386-4; SL-4-05926A} 032507 TM 5-6115-275-14 10 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 10 KW, AC, 120/208V PHASE, AND 120/240V, SINGLE PHASE, LESS ENGINE: DOD MODELS MEP- HZ, (NSN 6115-00-889-1447) AND MEP-023A, 400 HZ (6115-00-926-08 {NAVFAC P-8-615-14; TO 35C2-3-452-1} (THIS ITEM IS INCLUDED ON EM 0086, EM 0088 & EM 0127) 032508 TM 5-6115-275-24P 5 GENERATOR, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 10 KW, AC, 120/208 V, 3 PHASE AND 120/240 V, SINGLE PHASE (LESS ENGINE); D MEP-018A, UTILITY CLASS, 60 HZ (NSN 6115-00-889-1447) AND MEP-0 PRECISE CLASS, 400 HZ (6115-00-926-0843) {NAVFAC P8-615-24P; TO 35C2-3-452-4} (THIS ITEM IS INCLUDED ON EM 0086, EM 0088 & EM 0127) 032551 TM 5-6115-584-12 11 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 5 KW, 1 PHASE, 2 WIRE; 1 PHASE, 3 WIRE; 3 PHASE, 4 WIRE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) {NAVFAC P-8-622-12; TO 35C2-3-456-1; TM 05682C-12} 032640 TM 5-6115-585-12 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 10 KW, 1 PHASE, 2 WIRE 1 PHASE, 3 WIRE AND 3 PHASE, 4 WIRE; 120, 120/240 AND 120/208 V (DOD MODEL MEP-003A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1030 AND (MODEL MEP-112A), UTILITY CLASS, 400 HZ (6115-00-465-1027) {NAVFAC P-8-623-12; TO 35C2-3-455-1; TM-05684C/05685B-12} 032781 TM 5-6115-584-34 8 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MOUNTED, 5 KW, 1 PHASE, 2 WIRE, 1 PHASE, 3 WIRE, 3 PHASE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A), UTILITY CLASS, (NSN 6115-00-465-1044) {NAVFAC P-8-622-34; TO 35C2-3-456-2; TM 0568C-34} 032936 TM 5-6115-329-14 4 GENERATOR SET GASOLINE ENGINE DRIVEN, 0.5 KW (LESS ENGINE) (DOD MODEL MEP-014 UTILITY CLASS, 60 HZ) (NSN 6115-00-923-4469), (DOD MODEL MEP-01 UTILITY CLASS, 400 HZ (6115-00-940-7862) AND (DOD MODEL MEP-024 UTILITY CLASS, 28 VDC (6115-00-940-7867) {TO 35C2-3-440-1}

033374 TM 5-6115-332-14 10 GENERATOR SET, TAC GASOLINE ENGINE: AIR COOLED, 5 KW, AC, 120/240 V, SINGLE PHASE, V, 3 PHASE, SKID MOUNTED, TUBULAR FRAME (LESS ENGINE) (MILITARY DOD MODEL MEP-017A), UTILITY, 60 HZ (NSN 6115-00-017-8240) AND MODEL MEP-022A), UTILITY, 400 HZ (6115-00-017-8241) {NAVFAC P-8-614-14; TO 35C2-3-424-1} 033750 TM 5-6115-585-34 9 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MOUNTED, 10 KW, 1 PHASE, 2 WIRE, 1 PHASE, 3 WIRE, 3 PHASE, 4 WIRE, 120, 120/240 AND 120/208 VOLTS (DOD MODEL MEP-003A), UT CLASS, 60 HZ (NSN 6115-00-465-1030) {NAVFAC P-8-623-12; TO 35C2-3-455-2; TM-05684C/05685B-34} 034072 TM 5-6115-585-24P 5 GENERATOR SET, DIESEL ENGINE DRIVEN, TA SKID MTD, 10 KW, 1 PHASE, 2 WIRE; 1 PHASE, 3 WIRE; 3 PHASE, 4 W 120, 120/240 AND 120/208 V (DOD MODELS 003A), UTILITY CLASS, 60 (NSN 6115-00-465-1030) AND (MODEL MEP-112A), UTILITY CLASS, 400 (6115-00-465-1027) {NAVFAC P-8-623-24P; TO 35C2-3-455-4; SL-4-05684C/06585B} 040180 TM 5-6115-584-12-HR HAND RECEIPT MANUAL COVERING END ITEM/COMPONENTS OF END ITEM (C BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AAL) GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 5 KW, 1 WIRE; 1 PH, 3 WIRE; 3 PH, 4 WIRE, 120, 120/240 AND 120/208 V (D MEP-002A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) 040833 TM 5-6115-458-12-HR HAND RECEIPT MANUAL COVERING THE END ITEM/COMPONENTS OF END ITE BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AA) GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MOUNTED, 20 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MODEL MEP-009A), UT CLASS, 50/60 HZ (NSN 6115-00-133-9104) AND (DOD MODEL MEP-108A) PRECISE CLASS, 50/60 HZ (6115-00-935-8729) 040843 TM 5-6115-593-34 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD, 500 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODEL, MEP-029A, CLASS UTILITY, 50/60 HZ, (NSN 6115-01-030- DOD MODEL, MEP-029B, CLASS UTILITY, 50/60 HZ, (6115-01-318-6302 INCLUDING OPTIONAL KITS DOD MODEL, MEP-029AHK, HOUSING KIT, (6115-01-070-7550), DOD MODEL, MEP-029ACM, AUTOMATIC CONTROL MO (6115-01-275-7912) DOD MODEL, MEP-029ARC, REMOTE CONTROL MODULE (6110-01-070-7553) DOD MODEL, MEP-029ACC, REMOTE CONTROL CABLE, (6110-01-087-4127) {NAVFAC P-8 041070 TM 5-6115-593-12 GENERATOR SET, ENGINE DRIVEN, TACTICAL SKID MTD, 500 KW, 3 PHASE, 4 WIRE; 120/ 240/416 VOLTS DOD MODEL MEP-029A; CLASS UTILITY, HERTZ 50/60; (NSN 6115-01-030-6085); MEP-029B; UTILITY; 50/60; (6115-01-318- INCLUDING OPTIONAL KTS DOD MODELS MEP-029AHK; NOMENCLATURE HOUS (6115-01-070-7550) MEP-029ACM; AUTOMATIC CONTROL MODULE; (6115-01-275-7912); MEP-029ARC, REMOTE CONTROL MODULE, (6110-01-070-7553); MEP-029ACC, REMOTE CONTROL CABLE (6110-01-087-4127) {TO 35C2-3-463-1} 041338 LO 55-1730-229-12 POWER UNIT, AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU), WHEEL MOUNTED, SELF-PROPELLED, TOWABLE DOD MODEL-MEP-360A, CLASS-PRECISE, HERTZ-400, (NSN 1730-01-144-1897 042791 TM 5-6115-457-12-HR HAND RECEIPT MANUAL COVERING THE BASIC ISSUE ITEMS (BII) FOR GE SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD; 100 KW, 3 PHASE, 120/208 AND 240/416 V (DOD MODELS MEP007A), UTILITY CLASS, 50/6 (NSN 6115-00-133-9101), (MODEL MEP-106A), PRECISE CLASS, 50/60 (6115-00-133-9102) AND (MODEL MEP116A) PRECISE CLASS, 400 HZ (6115-00-133-9103) 043437 TM 5-6115-593-24P 1 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 500 KW, 3 PHA 4 WIRE; 120/208 AND 240/416 VOLTS DOD MODEL MEP-029A UTILITY CL 50/60 HZ (NSN 6115-01-030-6085) MEP-029B UTILITY CLASS, 50/60 (6115-01-318-6302) INCLUDING OPTIONAL KITS DOD MODEL MEP-029AHK HOUSING KIT (6115-01-070-7550) MEP-029ACM AUTOMATIC CONTROL MOD (6115-01-275-7912) MEP-029ARC REMOTE CONTROL MODULE (6110-01-070-7553) MEP-029ACC REMOTE CONTROL CABLE (6110-01-087 {NAVFAC P-8-631-24P; TO 35C2-3-463-4} 044703 TM 5-6115-545-12-HR HAND RECEIPT MANUAL COVERING COMPONENTS OF END ITEM (COEI), BAS ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AAL) FOR GENERA DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 60 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 V (DOD MODELS MEP-006A) UTILITY CLASS, 50/6 (NSN 6115-00-118-1243),

(MODEL MEP-105A) PRECISE CLASS, 50/60 H (6115-00-118-1252) AND (MODEL MEP-115A) PRECISE CLASS, 400 HZ (6115-00-118-1253) 050998 TM 5-6115-600-12 8 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 100 KW, 3 PHASE, 4 WIR 120/208 AND 240/416 V (DOD MODEL MEP-007B) CLASS UTILITY, 50/60 (NSN 6115-01-036-6374) INCLUDING OPTIONAL KITS, DOD MODEL MEP00 WINTERIZATION KIT, FUEL BURNING AND MEP007BWE WINTERIZATION KIT ELECTRIC 051007 TM 5-6115-600-24P 4 GENERATOR SET, DIESEL ENGINE DRIVEN, 100 KW, 3 PHASE, 4 WIRE, 120/208 AND VOLTS (DOD MODEL MEP-007B), UTILITY CLASS, 50/60 HZ (NSN 6115-01-036-6374) INCLUDING OPTIONAL KITS, DOD MODEL MEP007BWF, WINTERIZATION KIT, FUEL BURNING AND MEP007BWE WINTERIZATION KIT, ELECTRIC {TO 35C2-3-442-14; NAVFAC P-8-628-24P; SL-4-07464B} 057268 LO 5-6115-600-12 GENERATOR SET, DIESEL ENGINE DRIVEN; TACTICAL, SKID MTD, 100 KW PHASE, 4 WIRE; 120/208 AND 240/416 V (DOD MODEL MEP007B), CLASS UTILITY, 50/60 HZ (NSN 6115-01-036-6374) 057513 LO 5-6115-604-12 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE; SKID MT 750 KW, 3 PHASE, 4 WIRE; 2400/4160 AND 2200/3800 VOLTS (DOD MOD MEP208A) CLASS PRIME UTILITY, HZ 50/60 (NSN 6115-00-450-5881) {LI 6115-12/9} 060183 TM 5-6115-612-24P 6 GENERATOR SET, AVIATION, GAS TURBINE ENGINE DRIVEN, INTEGRA TRAILER MOUNTED, 10KW, 28 VOLTS MODEL MEP-362A, PRECISE, DC (NSN 6115-01-161-3992) {TM 6115-24P/1; AG-320B0-IPE-000; TO 35C2-3-471-4} 060188 TM 5-6115-612-34 4 GENERATOR SET, AVIATION, GAS TURBINE ENG DRIVEN, INTEGRAL TRAILER MOUNTED 10KW 28 VOLTS DOD MODEL MEP 36 PRECISE, DC, (NSN 6115-01-161-3992) {AG-320BO-MME-000; TM 6115- TO 35C2-3-471-2} 060645 LO 5-6115-612-12 AVIATION GENERATOR SET, GAS TURBINE, ENGINE DRIVEN, INTEGRAL TR MOUNTED, 10KW, 28 VOLTS DC DOD MODEL MEP 362A CLASS PRECISE (NSN 6115-01-161-3992) 060921 TM 55-1730-229-34 5 POWER UNIT, AVIATION, MULTI-OUTPUT GTED, ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU) WHEEL MOUNTED, SELF-PROPELLED, TOWA AC 400HZ, 3PH, 0.8 PF, 115/200V, 30 KW, DC 28VDC 700 AMPS, PNEUMATIC, 60 LBS/MIN. AT 40 PSIG, HYDRAULIC, 15 GPM AT 3300 PS DOD MODEL MEP-360A, CLASS PRECISE, 400 HERTZ, (NSN 1730-01-144- {AG 320A0-MME-000; TO 35C2-3-473-2; TM 1730-34/1} 060922 TM 55-1730-229-12 8 POWER UNIT, AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU) WHEEL MOUNTED, SELF-PROPELLED, TOWABLE, AC 400HZ, 3PH, 0.8 PF, 115/200V, 30 KW, DC 28 VDC 700 AMPS, PNEUMATIC 60 LBS/M AT 40 PSIG, HYDRAULIC 15 GPM AT 3300 PSIG, DOD MODEL MEP-360A, CLASS PRECISE, HERTZ 400, (NSN 1730-01-144-1897) {AG 320A0-OMM-000; TO 35C2-3-473-1; TM 1730-12/1} 061758 LO 5-6115-614-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD. 200 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS MODEL MEP009B, UTILI 50/60 HERTZ, (NSN 6115-01-021-4096) 061772 LO 5-6115-622-12 GENERATOR SET, DIESEL ENGINE-DRIVEN, WHEEL MOUNTED 750-KW, 3-PH 4-WIRE, 2200/3800 AND 2400/4160 VOLTS CUMMINS ENGINE COMPANY IN MODEL KTA-2300G-2 DOD MODEL MEP-012A; CLASS UTILITY; HERTZ 062762 LO 5-6115-615-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 3 K MODEL 016B; CLASS UTILITY MODE 50/60 HZ (NSN 6115-01-150-4140); DOD MODEL MEP-021B; CLASS UTILITY; MODE 400 HZ (6115-01-151-812 DOD MODEL MEP-026B; CLASS UTILITY; MODE 28 VDC (6115-01-150-036 {LI 05926B/06509B-12/5; P-8-646-LO} 064310 TM 5-6115-626-14&P 2 POWER UNIT PU-406B/M (NSN 6115-00-394-9576) MEP-005A 30 KW 60 HZ GENERATOR SET M200A1 2-WHEEL4-TIRE, MODIFIED TRAILER 064390 TM 5-6115-632-14&P 5 POWER UNIT PU-753/M (NSN 6115-00-033-1 MEP-003A 10 KW 60 HZ GENERATOR SET M116A2 2-WHEEL, 2-TIRE, MODI TRAILER 064392 TM 5-6115-629-14&P 3 POWER PLANT AN/AMJQ-12A (NSN 6115-00-257-1602) (2) MEP-006A 60HZ, GENERATOR SETS (2) M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAIL 064443 TM 5-6115-625-14&P 2 POWER UNIT PU-405A/M (NSN 6115-00-394-9577) MEP-004A 15 KW 60 HZ GENERATOR SET M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER (THIS ITEM IS INCLUDED ON EM 0086 & EM 0087) 064445 TM 5-6115-633-14&P 4 POWER PLANT AN/MJQ-18 (NSN 6115-00-033-1398) (2) MEP-003A 1 60 HZ GENERATOR SETS M103A3 2-WHEEL 1 1/2 TON MODIFIED TRAILER 064446 TM

5-6115-628-14&P 4 POWER PLANT AN/MJQ-15 (NSN 6115-00-400-7591) (2) MEP-113A 1 400 HZ GENERATOR SETS, (2) M200A1 2-WHEEL, 4-TIRE, MODIFIED TRA (THIS ITEM IS INCLUDED ON EM 0086) 064542 TM 5-6115-631-14&P 4 POWER PLANT AN/MJQ-16 (NSN 61 15-00-033-1395) (2) MEP-002A 5 KW 60 HZ GENERATOR SETS M103A3 2-WHEEL, 2-TIRE, MODIFIED TRAI 065071 TM 55-1730-229-24P 6 POWER AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDAULIC, PNEUMATIC (AG WHEEL MOUNTED, SELF-PROPELLED, TOWABLE AC 400 HZ, 3 PH, 0.8 PF, 115/200V, 30 KW DC 28 VDC 700 AMPS PNEUMATIC 60 LBS/MIN. AT 40 HYDRAULIC 15 GPM AT 3300 PSIG DOD MODEL MEP-360A, CLASS PRECISE 400 HERTZ (NSN 1730-01-144-1897) {TO 35C2-3-473-4; TM 1730-24P/ AG 320A0-IPB-000} 065603 TB 5-6115-593-24 WARRANTY PROGRAM FOR GENERATOR SET DOD MODEL MEP-029A HOUSING K DOD MODEL MEP-029AHK 066727 TM 5-6115-640-14&P 2 POWER AN/MJQ-32 (NSN 6115-01-280-2300) AN/MJQ-33 (6115-01-280-2301) (MEP-701A 3KW 60 HZ ACOUSTIC SUPPRESSION KIT GENERATOR SETS M116 2-WHEEL, 2-TIRE, 3/4-TON MODIFIED TRAILERS 066808 TM 5-6115-627-14&P 2 POWER PLANT AN/MJQ-10A (NSN 6115-00-394-9582); (2) MEP-005A 30 KW 60 HZ GEN SETS; (2) M200A1 2-WHEEL, 4 TIRE MODIFIED TRAILERS 066809 TM 5-6115-630-14&P 4 POWER UNIT, PU-751/M (NSN 6115-00-033-1373) MEP-002A, 5 KW, 60 HZ GENERATOR SET M116A1 2-WHEEL, 2-TIRE, MODIFIED TRAILER 066824 TM 5-6115-465-10-HR 1 HAND RECEIPT MANUAL COVERING END ITEM/COMPONENTS OF END ITEM (C BASIC ISSUE ITEMS, (BII) AND ADDITIONAL AUTHORIZATION LIST (AAL GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 30K 4 WIRE, 120/208 AND 240/416 VOLTS - MEP-005A, UTILITY, 50/60 HE (NSN 6115-00-118-1240); MEP-104A, PRECISE, 50/60 HERTZ, (6115-00-118-1247): MEP-114A, PRECISE, 400 HERTZ, (6115-00-118- INCLUDING AUXILIARY EQUIPMENT MEP-005AWF WINTERIZATION KIT, FUE BURNING (6115-00-463-9083); MEP-005AWE, WINTERIZATION KIT, ELEC (6115-00 067310 TM 9-6115-650-14&P 1 POWER PLAN AN/MJQ-25 (NSN 6115-01-153-7742) (2) MEP-112A 10 KW 400 HZ GENE SETS M103A3 2-WHEEL, 2-TIRE, MODIFIED TRAILER 067311 TM 9-6115-653-14&P 2 POWER UNIT PU-732/M (NSN 6115-00-260-3082) MEP-113A 15 KW 400 HZ GENERATOR SET M200 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067544 TM 9-6115-652-14&P 1 POWER UNIT PU-760/M (NSN 6115-00-394-9581) MEP-114A 30 KW 400 HZ GENERATOR M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067632 TM 9-6115-648-14&P POWER UNIT PU-650B/G (NSN 6115-00-258-1622) MEP-006A 60 KW 60 HZ GENERATOR M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067744 TM 9-6115-646-14&P 1 POWER UNIT PU-495A/G, (NSN 6115-00-394-9575) AND PU-495B/G, (6115-01-134-0 MEP-007A 100 KW, 60 HZ OR MEP-007B, 100 KW, 60 HZ GENERATOR SET M353-2-WHEEL, 2-TIRE MODIFIED TRAILER 067746 TM 9-6115-651-14&P POWER UNIT 707A/M (NSN 6115-00-394-9573) MEP-115A, 60 KW, 400 HZ GENERATOR M200A1, 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067879 TM 9-6115-647-14&P 1 POWER UNIT PU-789/M (NSN 6115-01-208-9827) MEP-114A, 30 KW 400 HZ GENERATOR SET M353 2-WHEEL, 2-TIRE, MODIFIED TRAILER 069601 TM 9-6115-464-10-HR HAND RECEIPT MANUAL COVERING THE END ITEMS/COMPONENTS OF END IT (COEI), BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION L (AAL) FOR GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MO 15 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODEL MEP UTILITY CLASS, 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP PRECISE CLASS, 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113 PRECISE CLASS, 400 HERTZ (6115-00-118-1244) 069602 LO 9-6115-464-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD, 15KW, 4 WIRE, 120/208 AND 240/416 VOLTS (DOD MODEL MEP 004A) (NSN 6115-00-118-1241); (DOD MODEL MEP 104A) (6115-00-118-1245) (DOD MODEL MEP-113A) (6115-00-118-1244) 069954 TM 9-6115-465-24P 2 GENERATOR SET, DIESEL ENGINE DRIVE TACTICAL SKID MTD. 30KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V MODELS; MEP-005A, UTILITY, 50/60 HZ, (NSN 6115-00-118-1240), MEP-104A PRECISE, 50/60 HZ, (6115-00-118-1247), MEP-114A, PRECISE, 400 H (6115-00-118-1248), INCLUDING OPTIONAL KITS, DOD MODELS; MEP-00 WINTERIZATION KIT, FUEL BURNING, (6115-00-463-9083), MEP-005-AW WINTERIZATION KIT, ELECTRIC, (6115-00-463-9085), MEP-002-ALM, L BANK KIT,

(6115-00-463-9088), MEP-005-AWM, WHEEL MOUNTING KIT, (6115-00-463-9094) {TO-35C2-3-070096 TM 9-6115-464-24P 1 GENERATOR S DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 15KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 VOLTS (DOD MODEL MEP-004A) UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) (DOD MODEL MEP-103A) PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) (DOD MODEL MEP-113A) PRECI CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS (DOD MODEL MEP-005-AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463 (DOD MODEL MEP-005-AWE) WINTERIZATION KIT, ELECTRIC (6615-00-46 (DOD MODEL MEP-004-ALM) LOAD BANK KIT (6115-00-191-9201 071025 TM 9-6115-641-10 2 GENERATOR SET SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A (60 HZ) (NSN 6115-01-274-7387) MEP-812A (400 HZ) (6115-01-274-7391) {TO 35C2-3-456-11} 071026 TM 9-6115-642-10 2 GENERATOR SET SKID MOUNTED, TACTICAL QUIE 10 KW, 60 AND 400 HZ MEP-803A (60 HZ) (NSN 6115-01-275-5061) MEP-813A (400 HZ) (6115-01-274-7392) {TO 35C2-3-455-11; TM 09247A/09248A-10/1} 071028 TM 9-6115-643-10 3 GENERATOR SET, SKID MOUNTED, TACTICAL QUI 15 KW, 50/60 AND 400 HZ MEP-804A (50/60 HZ) (NSN 6115-01-274-73 MEP-814A (400 HZ) (6115-01-274-7393) {TO 35C2-3-445-21} 071029 TM 9-6115-644-10 2 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A (50/60 HZ), (NSN 6115-01-274-7389) MEP-815A (400 HZ), (6115-01-274-7394) {TO 35C2-3-446-11; TM 09249A/09246A-10/1} 071030 TM 9-6115-645-10 2 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806A (50/60 HZ), (NSN 6115-01-274-7390) MEP-816A (400 HZ), (6115-01-274-7395) {TO 35C2-3-444-11; TM 09244A/09245A-10/1} 071031 LO 9-6115-641-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A TACTICAL QUIET 60 HZ (NSN 6115-01-274-7387) MEP-812A TACTICAL QUIET 400 HZ (6115-01-274-7391) 071032 LO 9-6115-642-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A TACTICAL QUIET 60 HZ (NSN 6115-01-275-5061) MEP-813A TACTICAL QUIET 400 HZ (6115-01-274-7392) 071033 LO 9-6115-643-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 15 KW, 50/60/400 HZ MEP-804A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7388) MEP-814 TACTICAL QUIET 400 HZ (6115-01-274-7393) 071034 LO 9-6115-644-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 40 MEP-805A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7389) MEP-815 TACTICAL QUIET 400 HZ (6115-01-274-7394) {LI 09249A/09246A-12} 071035 LO 9-6115-645-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 40 MEP-806A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7390) MEP-816 TACTICAL QUIET 400 HZ (6115-01-274-7395) {LI 09244A/09245A-12} 071036 TB 9-6115-641-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A AND MEP-812A 071037 TB 9-6115-642-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A AND MEP-813A {SI 09247A/09248A-24} 071038 TB 9-6115-643-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 15 KW, 50/60 AND 400 HZ MEP-804A AND MEP-814A 071039 TB 9-6115-644-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A AND MEP-815A {SI 09249A/09246A-24} 071040 TB 9-6115-645-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806A AND MEP-816A {SI 09244A/09245A-24} 071541 TM 9-6115-464-12 2 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 15 KW, 3 PHASE, 4 WIRE, 120/2 AND 240/416 VOLTS DOD MODEL MED-004A UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP-103A PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113A PRECISE CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS DOD MODEL MEP-005-AWF WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083) DOD MODEL MEP-005-AWE WINTERIZATION KIT, ELECTRIC (6115-00-463-9085) DOD MODEL MEP-004-ALM LOAD BANK KIT (6115-00-291 071604 TM 9-6115-645-24P GENERATOR SET, TACTICAL QUIET 60KW, 50/60/400 HZ (NSN 6115-01-274-7390) (MEP-806A) (6115-01-274-7395) (MEP-816A) {TO 35C2-3-444-14; TM 09244A/09245A-24P/3} 071605 TM 9-6115-642-24P GENERATOR SET, TACTICAL QUIET 10 KW, 60/400 HZ (NSN 6115-01-275-5061) (MEP-803A) (6115-01-274-7392) (MEP-813A) {TO

35C2-3-455-14; TM 09247A/09248A-24P/3} 071610 TM 9-6115-643-24P GENERATOR SET, TACTICAL QUIET 15KW, 50/60 - 400 HZ (NSN 6115-01-274-7388) (MEP-804A) (6115-01-274-7393) (MEP-814A) {TO 35C2-3-445-24} 071611 TM 9-6115-644-24P GENERATOR SET, TACTICAL QUIET 30KW, 50/60-400 HZ (NSN 6115-01-274-7389) (MEP-805A) (6115-01-274-7394) (MEP-815A) {TO 35C2-3-446-14; TM 09249A/09246A-24P/3} 071613 TM 9-6115-641-24P GENERATOR SET, TACTICAL QUIET 5 KW, 60/400 HZ (NSN 6115-01-274-7387) (MEP-802A) (6115-01-274-7391) (MEP-812A) {TO 35C2-3-456-14} 071713 TM 9-6115-645-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60KW, 50/60 AND 400 HZ MEP-806A (50/60 HZ) (NSN 6115-01-274-7390) MEP-816A (400 HZ) (6115-01-274-7395) {TO 35C2-3-444-12; TM 09244A/09245A-24/2} 071748 TM 9-6115-644-24 1 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A (50/60 HZ) (NSN 6115-01-274-7389) MEP-815A (400 HZ) (6115-01-274-7394) {TO 35C2-3-446-12; TM 09249A/09246A-24/2} 071749 TM 9-6115-643-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 15 KW, 50/60 AND 400 HZ MEP-804A (50/60 HZ) (NSN 6115-01-274-7388) MEP-814A (400 HZ) (6115-01-274-7393) {TO 35C2-3-445-22} 071750 TM 9-6115-642-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A (60 HZ) (NSN 6115-01-275-5061) MEP-813A (400 HZ) (6115-01-274-7392) {TO 35C2-3-455-12; TM 09247A/09248A-24/2} 071751 TM 9-6115-641-24 3 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A (60 HZ) (NSN 6115-01-274-7387) MEP-812A (400 HZ) (6115-01-274-7391) {TO 35C2-3-456-12} 072239 TM 9-6115-464-34 1 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 15 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 VOLTS DOD MODEL MEP-004A UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP 103A PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113A PRECISE CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS DOD MODEL MEP-005AWF WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083) DOD MODEL MEP-005AWE WINTERIZAT KIT, ELECTRIC (6115-00-463-9085) DOD MODEL MEP-004ALM LOAD BANK KIT (6115-00-291-920 073744 TM 9-6115-604-24P 1 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE SKID MOUNTED, 750KW, 3 PHASE, 4 WIRE, 2400/4160, AND 2200/3800 VOLTS DOD MODEL MEP208A PRIME UTILITY CLASS 50/60 HERTS (NSN 6115-00-450-5881) DOD MODEL 80-1466 REMOTE CONTROL MODULE CLASS (6115-01-150-5284 DOD MODEL 80-7320 SITE REQUIREMENTS MODULE CLASS (6115-01-150-5 {NAVFAC P-8-633-24P} 074040 TM 9-6115-545-24P GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD., 60 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS, D MODELS MEP-006A, UTILITY CLASS, 50/60 H/Z, (NSN 6115-00-118-124 MEP-105A, PRECISE CLASS, 50/60 H/Z, (6115-00-118-1252), MEP-115 PRECISE CLASS, 400 H/Z (6115-00-118-1253); INCLUDING OPTIONAL K DOD MODELS MEP-006AWF, WINTERIZATION FUEL BURNING, (6115-00-407 MEP-006AWE, WINTERIZATION KIT, ELECTRIC, (6115-00-455-7693), ME LOAD BANK KIT, (6115-00-407-8322), AND MEP-006AWM, WHEEL MOUNTI (6115-00-463-9092) {TO 074212 TM 9-6115-604-12 GENERATOR SET, DIESEL DRIVEN, AIR TRANSPORTABLE SKID MTD., 750 KW, 3 PHASE, 4 WIRE, 24 AND 2200/3800 V (DOD MODEL MEP 208A) CLASS PRIME UTILITY, HZ 50 (NSN 6115-00-450-5881) {NAVFAC P-8-633-12} 074896 TM 9-6115-604-34 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE SKID MTD., 750 KW, 3 PHASE, 4 WIRE, 2400/4160 AND 2200/3800 VOLTS DOD MODEL MEP 208A PRIME UTILITY CLASS 50/60 HERTZ (NSN 6115-00-450-5881) {NAVFAC P-8-633-34} 075027 TM 9-6115-584-24P 1 GENERATOR SET, DIESEL E DRIVEN, TACTICAL SKID MTD 5 KW, 1 PHASE -2 WIRE, 1 PHASE -3 WIR 3 PHASE -4 WIRE, 120, 120/240 AND 120/208 VOLTS (DOD MODEL MEP- UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) {NAVFAC P-8-622-24P TO 35C2-3-456-4} 077581 TM 9-6115-673-13&P 2KW MILITARY TACTICAL GENERATOR SET 120 VAC, 60 HZ (NSN 6115-01-435-1565) (MEP-531A) (EIC: LKA) (NSN 6115-21-912-0393) (MECHRON) 28 VDC (NSN 6115-01-435-1567) (MEP-501A) (EIC: LKD) (NSN 6115-21-912-0392) (MECHRON) 078167 TM 9-6115-672-14 GENERATOR SET SKID MOUNTED TACTICAL QUIET 60KW, 50/60 AND 400 HZ, MEP-806B (50/60 HZ) (NSN 6115-01-462-0291) EIC: GGW, MEP-816B (400 HZ) (NSN 6115-01-462-0292) EIC: GGX 078443 TM

9-6115-639-13 1 3KW TACTICAL QUIET GENERATOR SET MEP 831A (60 HZ) (NSN 6115-01-285-3012) (EIC: VG6) MEP 832A (400 HZ) (NSN 6115-01-287-2431) (EIC: VN7) 078490 TM 9-6115-671-14 OPERATOR, UNIT, GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ, MEP-805B (50/60 HZ) (NSN 6115-01-461-9335) (EIC: GGU) MEP-815B (400 HZ) (6115-01-462-0290) (EIC: GGV) 078503 TM 9-6115-671-24P GENERATOR SET SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805B (50/60 HZ) (NSN 6115-01-461-9335) (EIC: GGU) MEP-815B (400 HZ) (NSN 6115-01-462-0290) (EIC: GGV) 078504 TM 9-6115-672-24P GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806B (50/60 HZ) (NSN 6115-01-462-0291) (EIC: GGU) MEP-816B (400 HZ) (NSN 6115-01-462-0292) (EIC: GGX) 078505 TB 9-6115-671-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30KW, 50/60 AND 400 HZ MEP-805B AND MEP-815B PROCURED UNDER CONTRACT DAAK01-96-D-00620 WITH MCII INC 078506 TB 9-6115-672-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30KW, 50/60 AND 400 HZ MEP-806B AND MEP-816B PROCURED UNDER CONTRACT DAAK01-96-D-00620 WITH MCII INC 078523 TM 9-6115-664-13&P 5KW, 28VDC, AUXILIARY POWER UNIT (APU) MEP 952B NSN 6115-01-452-6513 (EIC: N/A) 078878 TM 9-6115-639-23P 3KW TACTICAL QUIET GENERATOR SET MEP 831A (60 HZ) (NSN 6115-01-285-3012) (EIC: VG6) MEP 832A (400 HZ) (NSN 6115-01-287-2431) (EIC: VN7) 079379 TB 9-6115-641-13 WINTERIZATION KIT (NSN 6115-01-476-8973) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 5KW, 60 AND 400 HZ MEP-802A (600HZ) (6115-01-274-7387) MEP-812A (400HZ) (6115-01-274-7391) 079460 TB 9-6115-642-13 WINTERIZATION KIT (NSN 6115-01-477-0564) (EIC: N/A) INSTALLED ON GENERATOR KIT, SKID MOUNTED, TACTICAL QUIET, 10KW, 60 AND 400 HZ MEP-803A (60HZ) (6115-01-275-0561) MEP-813A (400HZ) (6115-01-274-7392) 079461 TB 9-6115-643-13 WINTERIZATION KIT (NSN 6115-477-0566) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 15KW, 50/60 AND 400 HZ, MEP-804A (50/60HZ) (6115-01-274-7388) MEP-814A (400HZ) (6115-01-274-7393) 079462 TB 9-6115-644-13 WINTERIZATION KIT (NSN 6115-01-474-8354) (EIC: N/A) INSTALLED ON GENERATOR SET, SKID MOUNTED, 30KW, 50/60 AND 400 HZ MEP-805A (50/60HZ) (NSN 6115-01-274-7389) MEP-815A (400HZ) (NSN 6115-01-274-7394) 079463 TB 9-6115-645-13 WINTERIZATION KIT (NSN 6115-01-474-8344) (EIC: N/A) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 60KW, 50/60 AND 400 HZ, MEP-806A (50/60HZ) (6115-01-274-7390) MEP-816A (400HZ) (6115-01-274-7395) 080214 TM 9-6115-670-14&P AUXILIARY POWER UNIT, 20KW, 120/240 VAC, 60 HZ, MODEL NO. MEP-903A(SICPS) NSN 6115-01-431-3062 MODEL NUMBER MEP-903B (JTACS) NSN 6115-01-431-3063 MODEL NO MEP-903C9WIN-T) NSN 6115-01-458-5329 (EIC: N/A)

briggs and stratton governor spring installation: *Chilton's Repair & Tune-up Guide for Small Engines* Chilton Book Company, 1979

briggs and stratton governor spring installation: *Reel Units RL-26, R-26-A,-B, and -C.* , 1944

briggs and stratton governor spring installation: *Chilton's Guide to Small Engine Repair Up to 6 Hp* , 1983 Covers the maintenance and repair of small engines, diagnosis of common problems, off-season storage, and component safety.

briggs and stratton governor spring installation: *Electrical Power Production Specialist (AFSC 54252): Engine systems* William L. Hall, 1984

briggs and stratton governor spring installation: *Small Engine Repair* United States. Office of Education, 1969

briggs and stratton governor spring installation: *Power Units PE-75-C Through PE-75-T.* , 1943

briggs and stratton governor spring installation: *Power Units :PE-49* , 1945

briggs and stratton governor spring installation: *Small Gas Engine Repair* Paul Dempsey, 1993 This popular guide is just the thing for people who seem to spend more time arguing with their lawn mowers than they do using them. With *Small Gas Engine Repair*, do-it-yourselfers can fix any small gas-powered machine on the spot and save hundreds of dollars in technical fees. The book's

also a great source of troubleshooting and preventive maintenance techniques. Enhanced illustrations and lots of new material make up this second edition, including coverage of new American engines, emissions testing procedures, carburetor rebuilding techniques, and new starter and ignition systems. Japanese engines are also highlighted for the first time.

briggs and stratton governor spring installation: *Small Gasoline Engines* Donald L. Ahrens, Forrest W. Bear, Harry Hoerner, 1992-06 This manual contains the latest in small engine technology including CDI solid-state ignition, automatic chokes, no choke carburetors, and fuel pump carburetor systems. Classroom and laboratory exercises are included. Special emphasis related to small engine overhaul and repair has been designed into all laboratory exercises to make your small engine instructional unit more complete. Procedures for ordering small engine parts for repair are covered throughout the manual. The appendix contains safety exam, parts order form, English/Metric equivalent charts, engine-matics and hydra-matics formulas, and engine overhaul worksheets.

briggs and stratton governor spring installation: Tank Car Heater, Model DS, 2-car Capacity , 1942

briggs and stratton governor spring installation: Field Manuals United States. War Department, 1944

briggs and stratton governor spring installation: **Small AC Generator Service Manual** , 1986

briggs and stratton governor spring installation: *Farm, Lawn and Garden Catalog* , 1972

briggs and stratton governor spring installation: List and Index of Administrative and Supply Publications , 1945

briggs and stratton governor spring installation: **General Power Mechanics** William Harry Crouse, 1976

Related to briggs and stratton governor spring installation

Briggs and Stratton compression release versus valve clearance Hello! Can anyone help with a diagnostic procedure to reliably rule out a broken compression release mechanism/pin versus a valve clearance that needs to be tweaked, or

Understanding the solenoid on the carburetor bowl of some new I have a year old low end 42in TroyBuilt rider with a 500cc Briggs engine and it suddenly died today and I am trying to trouble shoot it. I believe most likely is is one of the

19 horse Briggs & Stratton will only run with choke half on Changed carbs adjusted valves still the same thing hunts real bad only runs with choke half on. Changed carb head gasket and lapped the babes still hunts an dies without

briggs and stratton compression - Lawn Mower Forum have a b&s model 44u877-0005-g1 serial number 180123yg : owner said was running good then heard a pop stopped mowing parked, did a compression check found both

Briggs Quantum 190cc rebuild? - Lawn Mower Forum PartsTree - Home of OEM Parts for Outdoor Power Equipment Parts lookup and repair parts diagrams for outdoor equipment like Toro mowers, Cub Cadet tractors, Husqvarna

& stratton popping or backfiring through the carburetor Lawnranger Well-Known Member Joined Threads 6 Messages 671 / HELP..briggs & stratton popping or backfiring through the carburetor #5

18 HP Briggs & Stratton I/C Series, how to adjust? - Lawn Mower I need step-by-step advice and instructions to get my trusty old Briggs & Startton, Twin engine (18 HP Briggs & Stratton I/C Series), boxer run better. Now it starts okay but runs

Briggs Ignition - Weak Spark - Lawn Mower Forum I have a lawnmower with a Briggs and Stratton motor, model 128T05-5268-B1. This motor was equipped with an electric starter, but the starter, battery and

Automatic Compression Release - Lawn Mower Forum These Briggs Vtwins always have high

compression. I say replace starter and battery and clean the Battery cable ends and the starter mounting surface with a wire brush

Briggs Intek, replaced everything, still surging.. Ideas? Own a JD La115 with an Briggs Intek 19.5 engine. Have an issue with surging and backfiring when not under load. Have replaced fuel filter, gaskets, carburetor, spark plug, fuel

Briggs and Stratton compression release versus valve clearance Hello! Can anyone help with a diagnostic procedure to reliably rule out a broken compression release mechanism/pin versus a valve clearance that needs to be tweaked, or

Understanding the solenoid on the carburetor bowl of some new I have a year old low end 42in TroyBuilt rider with a 500cc Briggs engine and it suddenly died today and I am trying to trouble shoot it. I believe most likely is is one of the

19 horse Briggs & Stratton will only run with choke half on Changed carbs adjusted valves still the same thing hunts real bad only runs with choke half on. Changed carb head gasket and lapped the babes still hunts an dies without

briggs and stratton compression - Lawn Mower Forum have a b&s model 44u877-0005-g1 serial number 180123yg : owner said was running good then heard a pop stopped mowing parked, did a compression check found both

Briggs Quantum 190cc rebuild? - Lawn Mower Forum PartsTree - Home of OEM Parts for Outdoor Power Equipment Parts lookup and repair parts diagrams for outdoor equipment like Toro mowers, Cub Cadet tractors, Husqvarna

& stratton popping or backfiring through the Lawnranger Well-Known Member Joined Threads 6 Messages 671 / HELP..briggs & stratton popping or backfiring through the carburetor #5

18 HP Briggs & Stratton I/C Series, how to adjust? - Lawn Mower I need step-by-step advice and instructions to get my trusty old Briggs & Startton, Twin engine (18 HP Briggs & Stratton I/C Series), boxer run better. Now it starts okay but runs

Briggs Ignition - Weak Spark - Lawn Mower Forum I have a lawnmower with a Briggs and Stratton motor, model 128T05-5268-B1. This motor was equipped with an electric starter, but the starter, battery and

Automatic Compression Release - Lawn Mower Forum These Briggs Vtwins always have high compression. I say replace starter and battery and clean the Battery cable ends and the starter mounting surface with a wire brush

Briggs Intek, replaced everything, still surging.. Ideas? Own a JD La115 with an Briggs Intek 19.5 engine. Have an issue with surging and backfiring when not under load. Have replaced fuel filter, gaskets, carburetor, spark plug, fuel

Related Articles

- [da form 3434](#)
- [estrellitas chart](#)
- [dap notes pdf](#)

[Back to Home](#)